



- 1** Step 1:
- Ensure you have adequate electrical power in each base
 - Ensure you have all the components required for your installation



- 2** Step 2:
- Strip the base and remove base shelf and install driver box
 - Do not plug in power supply at this point

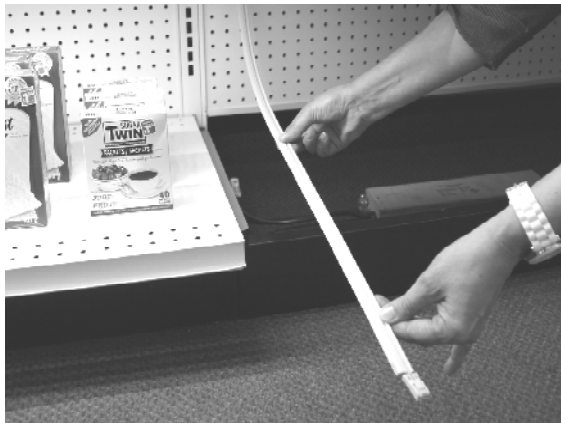

- 3** Step 3:
- From the base slide the track up behind the shelves; cut to fit length of upright if needed. Use scissors or similar cutting tool. DO NOT cut the end with the yellow connector!

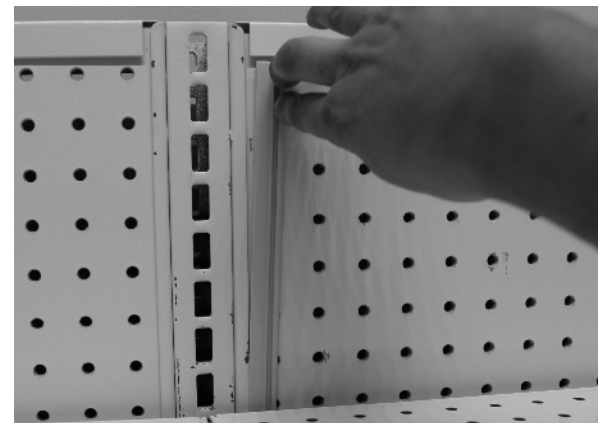

- 4** Step 4:
- Slide power track into the flange of the upright



- 5** Step 5:
- The QUICK CONNECT should suspend 3" above the floor. Connect the driver to the track by pressing the two yellow parts together. There will be an audible 'click' if properly connected. Now plug in the driver to the line power using the attached cordset



- 6** Step 6:
- Install the LED magnetic strip light under each shelf you want to illuminate



For assistance call our toll free help line: 1-800-509-0222

* 10 year limited warranty per Terms & Conditions



www.artron.com

© 2017 ARDRON-MACKIE LIMITED
Specifications subject to change without notice






- 7** Step 7:
- Connect fixtures horizontally in/out (male to female) up to seven 4 ft fixtures max



- 8** Step 8:
- Connect first fixture to master harness cable

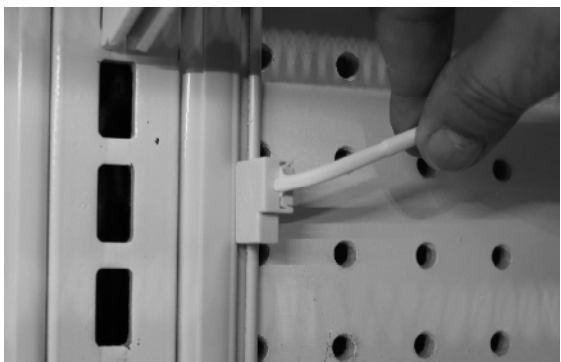

- 9** Step 9:
- Rotate the connector 90° into track until it 'clicks'
 - Your shelves are now illuminated



- 10** Step 10:
- Use magnet on wire or clips to manage the wires so that they are not visible



- 11** Step 11
- Replace the base deck



- 12** Step 12
- Re-merchandise your shelves



© 2017 ARDRON-MACKIE LIMITED
Specifications subject to change without notice



www.ardron.com

For assistance call our toll free help line: 1-800-509-0222

*10 year limited warranty per Terms & Conditions